



Dell and the Dell logo are trademarks of Dell Inc.

ConnectX[®]-2 Dual Port I/O Card for Dell C6100 User Manual

MCQH29-XDR

Rev 1.0

www.mellanox.com

NOTE:

THIS HARDWARE, SOFTWARE OR TEST SUITE PRODUCT (“PRODUCT(S)”) AND ITS RELATED DOCUMENTATION ARE PROVIDED BY MELLANOX TECHNOLOGIES “AS-IS” WITH ALL FAULTS OF ANY KIND AND SOLELY FOR THE PURPOSE OF AIDING THE CUSTOMER IN TESTING APPLICATIONS THAT USE THE PRODUCTS IN DESIGNATED SOLUTIONS. THE CUSTOMER'S MANUFACTURING TEST ENVIRONMENT HAS NOT MET THE STANDARDS SET BY MELLANOX TECHNOLOGIES TO FULLY QUALIFY THE PRODUCT(S) AND/OR THE SYSTEM USING IT. THEREFORE, MELLANOX TECHNOLOGIES CANNOT AND DOES NOT GUARANTEE OR WARRANT THAT THE PRODUCTS WILL OPERATE WITH THE HIGHEST QUALITY. ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT ARE DISCLAIMED. IN NO EVENT SHALL MELLANOX BE LIABLE TO CUSTOMER OR ANY THIRD PARTIES FOR ANY DIRECT, INDIRECT, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING, BUT NOT LIMITED TO, PAYMENT FOR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY FROM THE USE OF THE PRODUCT(S) AND RELATED DOCUMENTATION EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Mellanox Technologies
350 Oakmead Parkway Suite 100
Sunnyvale, CA 94085
U.S.A.
www.mellanox.com
Tel: (408) 970-3400
Fax: (408) 970-3403

Mellanox Technologies, Ltd.
PO Box 586 Hermon Building
Yokneam 20692
Israel
Tel: +972-4-909-7200
Fax: +972-4-959-3245

© Copyright 2010. Mellanox Technologies, Inc. All Rights Reserved.

Mellanox®, ConnectX®, BridgeX®, InfiniBlast®, InfiniBridge®, InfiniHost®, InfiniRISC®, InfiniScale®, and InfiniPCI® are registered trademarks of Mellanox Technologies, Ltd.

PhyX and Virtual Protocol Interconnect are trademarks of Mellanox Technologies, Ltd.

All other marks and names mentioned herein may be trademarks of their respective companies.

ConnectX®-2 Dual Port VPI I/O Card for Dell C6100

Table of Contents

| | | |
|-------------------|---|-----------|
| Chapter 1 | Overview | 8 |
| 1.1 | I/O Card | 8 |
| 1.2 | Finding the GUID/MAC and Serial Number on the Adapter Cards | 9 |
| Chapter 2 | I/O Card Interfaces | 10 |
| 2.1 | I/O Interfaces | 10 |
| 2.1.1 | InfiniBand Interface | 10 |
| 2.1.2 | Ethernet Interface | 10 |
| 2.2 | LED Assignment | 11 |
| 2.3 | PCI Express Interface | 11 |
| 2.4 | Memory | 11 |
| 2.4.1 | System Memory | 11 |
| 2.4.2 | EEPROM | 12 |
| 2.4.3 | Flash | 12 |
| 2.5 | EEPROM VPD | 12 |
| Chapter 3 | Driver Software and Firmware | 14 |
| 3.1 | Driver Software | 14 |
| 3.1.1 | Linux | 14 |
| 3.1.2 | Windows | 14 |
| 3.2 | Updating Card Firmware | 14 |
| 3.3 | FlexBoot | 14 |
| Chapter 4 | I/O Card Installation | 15 |
| 4.1 | Hardware and Software Requirements | 15 |
| 4.2 | Installation Kit | 15 |
| 4.3 | Installation Instructions | 16 |
| 4.4 | Safety Warnings | 19 |
| Chapter 5 | Cables and Modules | 21 |
| 5.1 | Cable Installation | 21 |
| 5.1.1 | Inserting a Cable into the Card | 21 |
| 5.1.2 | Removing a Cable from the Card | 22 |
| Appendix A | Specifications | 23 |
| Appendix B | QSFP Interface | 27 |
| Appendix C | Avertissements de sécurité d'installation (French) | 29 |
| Appendix D | Installation - Sicherheitshinweise (German) | 30 |

List of Figures

| | | |
|------------|--|----|
| Figure 1: | Card Product Labels | 9 |
| Figure 2: | PCI Connection | 10 |
| Figure 3: | Front Panel | 11 |
| Figure 4: | Flash Jumper | 12 |
| Figure 5: | Installation Kit Parts | 16 |
| Figure 6: | Removing From the Server | 17 |
| Figure 7: | Top View | 17 |
| Figure 8: | Install the Plastic Leg onto the Board | 18 |
| Figure 9: | Installing the Connector Board into the HCA Card | 18 |
| Figure 10: | Dell Card Installed | 18 |
| Figure 11: | Front Panel | 19 |
| Figure 12: | Top View | 19 |
| Figure 13: | Connector Orientation | 22 |
| Figure 14: | Mechanical Drawing | 23 |
| Figure 15: | QSFP Connector Male and Female Views | 28 |

List of Tables

| | | |
|----------|--|----|
| Table 1: | Revision History Table | 6 |
| Table 2: | Documents List | 7 |
| Table 3: | ConnectX-2 I/O Card Details | 8 |
| Table 4: | VPI Support | 10 |
| Table 5: | Jumper Configuration | 12 |
| Table 6: | MCQH29-XDR VPD | 12 |
| Table 7: | Hardware and Software Requirements | 15 |
| Table 8: | ConnectX® Dual-Port InfiniBand I/O Card Installation Kit | 16 |
| Table 9: | ConnectX-2 MCQH29-XDR Specifications | 26 |

Revision History

This document was first printed on 5/6/10.

Table 1 - Revision History Table

| Date | Rev | Comments/Changes |
|------------|-----|------------------|
| April 2010 | 1.0 | Initial release |

About this Manual

This *User Manual* describes ConnectX-2 Dual Port VPI I/O cards for the Dell C6100 chassis.

It provides details as to the interfaces of the board, specifications, required software and firmware for operating the cards, installation instructions, and relevant documentation.

Intended Audience

This manual is intended for the installer and user of the I/O cards.

The manual assumes basic familiarity with the Infiniband® architecture specifications.

Related Documentation

Table 2 - Documents List

| |
|--|
| <i>InfiniBand® Architecture Specification Volume 1 Release 1.2 and Volume 2 release 1.2.1– Infiniband Architecture Specifications Descriptions</i> |
| <i>PCI Express Base 2.0 Specification (1.1 compatible)</i> |
| <i>PCI Local Bus Specification Rev 2.3</i> |

Online Resources

- Mellanox Technologies Web pages: <http://www.mellanox.com>
- Dell Support Web pages: <http://support.dell.com>

Document Conventions



These symbols indicate a situation, status, or condition that may cause harm to people or damage to the equipment.

When discussing memory sizes, MB and MBytes are used in this document to mean size in mega bytes. The use of Mb or Mbits (small b) indicates size in mega bits.

1 Overview

This document is a *User Manual* for the Mellanox ConnectX-2 20 and 40Gb/s InfiniBand / 10GigE Ethernet dual port QSFP I/O cards for the Dell C6100 chassis.


The cards described in this manual have the following main features:


- 1 μ s MPI ping latency
- Selectable 10, 20, or 40Gb/s InfiniBand or 10GigE per port
- CPU offload of transport operations
- End-to-end QoS and congestion control
- Hardware-based I/O virtualization
- PCI Express 2.0 (up to 5GT/s)
- TCP/UDP/IP stateless offload
- Fibre Channel encapsulation (FCoIB or FCoE)

1.1 I/O Card

Table 3 - ConnectX-2 I/O Card Details

| Ordering Part Number (OPN) | PCI Express SERDES Speed | IB Data Transmission Rate | Eth Data Transmission Rate | RoHS | Adapter IC Part Number |
|----------------------------|--------------------------|---------------------------|----------------------------|------|------------------------|
| MCQH29-XDR | PCIe Gen2 5.0 GT/s | InfiniBand 40 Gb/s QDR | 10 Gb/s | R-6 | MT25408B0-FCCR-QI |

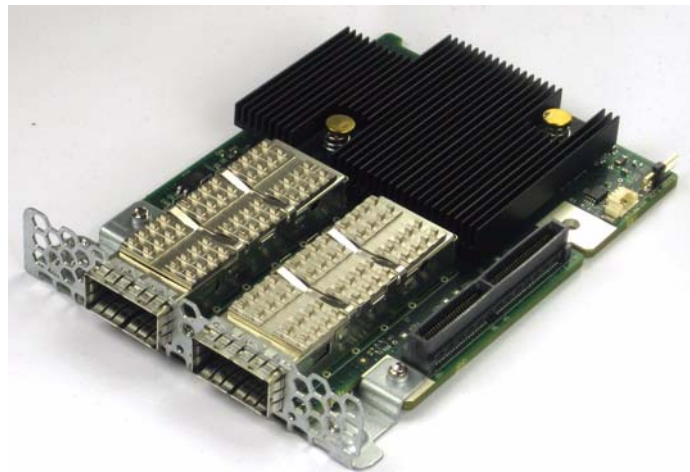


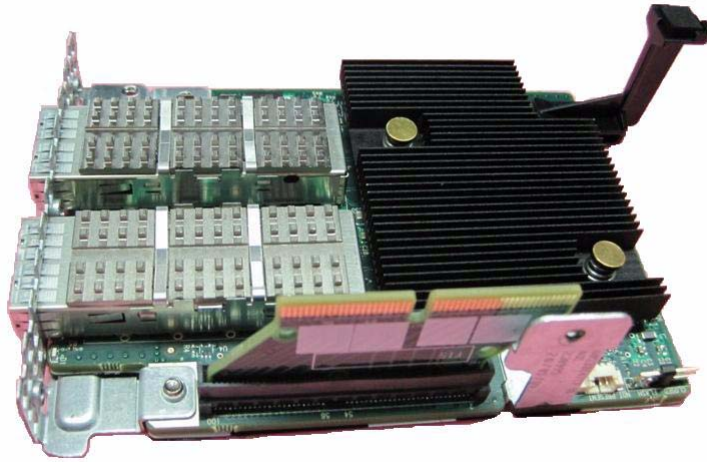

1.2 Finding the GUID/MAC and Serial Number on the Adapter Cards


All cards have a label on the printed side of the card that has the card serial number, the card MAC for Ethernet protocol, and the card GUID for InfiniBand protocol. VPI Cards have both a MAC and a GUID.

Figure 1: Card Product Labels

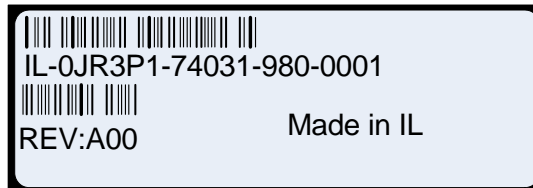

2 I/O Card Interfaces

Figure 2: PCI Connection

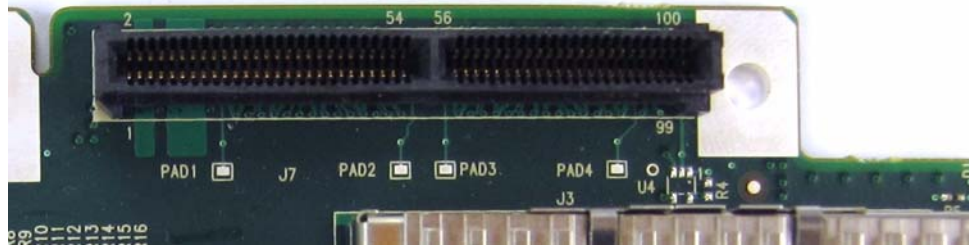

2.1 I/O Interfaces

The ConnectX-2 I/O card is VPI-capable, supporting InfiniBand or Ethernet on either port. The following table shows the supported configurations.

Table 4 - VPI Support

| Port 1 | Port 2 | Supported |
|--------|--------|---------------|
| IB | IB | supported |
| IB | EN | supported |
| EN | IB | not supported |
| EN | EN | supported |

2.1.1 InfiniBand Interface

The ConnectX-2 VPI adapter card is compliant with the *InfiniBand Architecture Specification, Release 1.2.1*. It has two compliant QSFP InfiniBand ports, with four Tx/Rx pairs of SerDes connected to QSFP connectors.

2.1.2 Ethernet Interface


The ConnectX[®]-2 VPI adapter card is compliant with the *IEEE Std 802.3ae Specification*. Each port can be connected to a 10 Gigabit Ethernet switch through the use of QSFP to SFP+ hybrid cables.

2.2 LED Assignment

Table 5 - Physical and Logical Link Indications

| Port Number | LED Name |
|-------------|--|
| Port 1 | Physical Link - Green Constant on indicates a good physical link Blinking indicates a problem with the Physical link |
| | Data Activity - Yellow Blinking indicates Data Transfer Constant on indicates no Data Transfer |
| Port 2 | Physical Link - Green Constant on indicates a good physical link Blinking indicates a problem with the Physical link |
| | Data Activity - Yellow Blinking indicates Data Transfer Constant on indicates no Data Transfer |

Figure 3: Front Panel

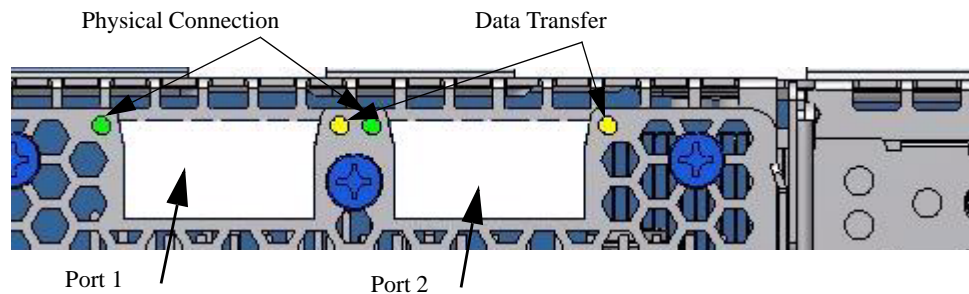

2.3 PCI Express Interface

The I/O card attaches to the blade's PCI Express interface through a press fit connector. The PCI Express x8 interface is version 2.0 compliant and compatible with base 1.1 chipsets. The device can be either a master initiating the PCI Express bus operations or a slave responding to PCI bus operations.

2.4 Memory

The I/O card supports multiple memory devices through the PCI Express, Flash, and I2C compatible interfaces.

2.4.1 System Memory

The I/O card utilizes the PCI Express interface to store and access fabric connection information on the system memory.

2.4.2 EEPROM


The I/O card incorporates an EEPROM that is accessible through the I2C-compatible interface. The EEPROM is used for storing the Vital Product Data (VPD). The VPD format adheres to the *PCI Local Bus Specification Rev 2.3* VPD definition. The EEPROM capacity is 4Kb.

2.4.3 Flash

The I/O card includes one SPI Flash device accessible via the Flash interface of the MT25408B0 ConnectX-2 device.

There is a jumper on the card that indicates to the device whether an on-board Flash device is to be used. Table 6 provides information on this jumper. See the schematic in Figure 14 on page 23 for the jumper location.

Table 6 - Jumper Configuration

| Description | Option | Card Default Configuration | Comments |
|-------------------------------|--|------------------------------------|------------|
| Flash present/ not present | connection open – Flash present connection shorted – Flash not present Figure 4: Flash Jumper  | connection open – Flash present | Header 1x2 |

2.5 EEPROM VPD

The I/O card incorporates an EEPROM that is accessible through the I2C-compatible interface. The EEPROM is used for storing the Vital Product Data (VPD) and FRU. The VPD format adheres to the *PCI Local Bus specification rev 2.3* VPD definition. The EEPROM capacity is 4Kb.

Table 7 - MCQH29-XDR VPD

| Offset (Decimal) | Item | Value | Format | Description |
|------------------|--|--------------------------------|--------------|--|
| 0 | Large Resource Type ID String Tag (0x02) | 0x82 | | |
| 1 | Length | 0x12 | | |
| 3 | Data | "DELL PE C6100 MEZZ IB QDR" | Alphanumeric | Short description / ID |
| 21 | Large Resource Type VPD-R Tag (0x10) | 0x90 | | Read Only Area |
| 22 | Length | 0x43 | | |
| 24 | VPD Keyword | "PN" | Numbers | Add in Card Part Number |
| 26 | Length | 0x6 | | |
| 27 | Data | "059MP7" | | |
| 33 | VPD Keyword | "EC" | Alphanumeric | Engineering Change Level of the card (rev) |
| 35 | Length | 0x3 | | |

Table 7 - MCQH29-XDR VPD

| Offset (Decimal) | Item | Value | Format | Description |
|------------------|--------------------------------------|--------------------------------|--------------|------------------------------|
| 36 | Data | "A00" | | |
| 39 | VPD Keyword | "SN" | Alphanumeric | Serial Number |
| 41 | Length | 0x14 | | |
| 42 | Data | "OO059MP7MM MMMYMDSSSS " | | according to the board label |
| 62 | VPD Keyword | "V0" | | Misc Information |
| 64 | Length | 0x16 | | |
| 65 | Data | "DELL PE C6100 MEZZ IB QDR" | | |
| 87 | VPD Keyword | "RV" | | |
| 89 | Length | 0x1 | | |
| 90 | Data | Checksum | | |
| 91 | Large Resource Type VPD-W Tag (0x11) | 0x91 | | Read / Write Area |
| 92 | Length | 0xA1 | | |
| 94 | VPD Keyword | "V1" | | Driver version |
| 96 | Length | 0x6 | | |
| 97 | Data | "N/A" | Number | |
| 103 | VPD Keyword | "YA" | | Asset Tag |
| 105 | Length | 0x20 | | |
| 106 | Data | "N/A" | Alphanumeric | |
| 138 | VPD Keyword | "RW" | | Remaining read/write area |
| 140 | Length | 0x72 | | |
| 141 | Data | Reserved (0x00) | | |
| 255 | Small Resource Type END Tag (0x11) | 0x78 | | |
| 256 | Mellanox Read Only Mask | 0x0...0 | Numbers | |
| 350 | Mellanox Read/Write Mask | 0x1...1 | Numbers | |
| 511 | Mellanox Read Only Mask | 0x0 | Numbers | |

3 Driver Software and Firmware

3.1 Driver Software

3.1.1 Linux

For Linux, download and install the latest OpenFabrics Enterprise Distribution (OFED) software package available via the Mellanox Web site at:

<http://www.mellanox.com> => Downloads => InfiniBand/VPI SW/Drivers. Follow the installation instructions included in the download package.

3.1.2 Windows

For Windows, download and install the latest WinOF for VPI software package available via the Mellanox Web site at:

<http://www.mellanox.com> => Downloads => InfiniBand/VPI SW/Drivers

3.2 Updating Card Firmware

Each card is shipped with the latest version of qualified firmware at the time of manufacturing. Firmware is updated occasionally, and the most recent firmware can be obtained from

<http://www.mellanox.com> => Downloads => Firmware.

Firmware can be updated on the stand alone single card using the **flint** tool of the *Mellanox Firmware Tools (MFT)* package. This package is available for download, along with its user manual, from the Mellanox Firmware Tools page. See <http://www.mellanox.com> => Downloads => Firmware Tools.

A firmware binaries table lists a binary file per card. The file name of each such binary is composed by combining the firmware name, the firmware release version, and the card part number.

Please contact Mellanox or your assigned Field Application Engineer if you cannot find the firmware binary for your adapter card.

3.3 FlexBoot

FlexBoot enables remote boot over Ethernet or InfiniBand using Boot over InfiniBand (BoIB), Boot over Ethernet (BoE), or Boot over iSCSI (Bo-iSCSI). This technology is based on the Pre-boot Execution Environment (PXE) standard specification, and FlexBoot software is based on the open source EtherBoot/gPXE project (see www.etherboot.org). For more information go to <http://www.mellanox.com> > Products > InfiniBand/VPI SW/Drivers > FlexBoot.

4 I/O Card Installation

4.1 Hardware and Software Requirements

Before installing the VPI I/O card, please make sure that the system meets the hardware and software requirements listed in Table 8, “Hardware and Software Requirements”.

Table 8 - Hardware and Software Requirements

| Requirement | Description |
|--|---|
| Hardware | Used with Dell C6100 chassis |
| Software Operating Systems/Distributions | Refer to the C6100 chassis Manuals |
| Software Stacks | Mellanox OpenFabric software package (either MLNX_OFED for Linux or MLNX_WinOF for Microsoft Windows) |

4.2 Installation Kit


Make sure all of the parts are in the kit before you start the installation. If any parts are damaged or missing, call your supplier immediately.

The kit includes:

Table 9 - ConnectX® Dual-Port InfiniBand I/O Card Installation Kit

| | |
|-------------------|-------------------|
| 1 I/O Card | 1 connector board |
| 3 flathead screws | 1 plastic leg |
| 3 panhead screws | |

Figure 5: Installation Kit Parts

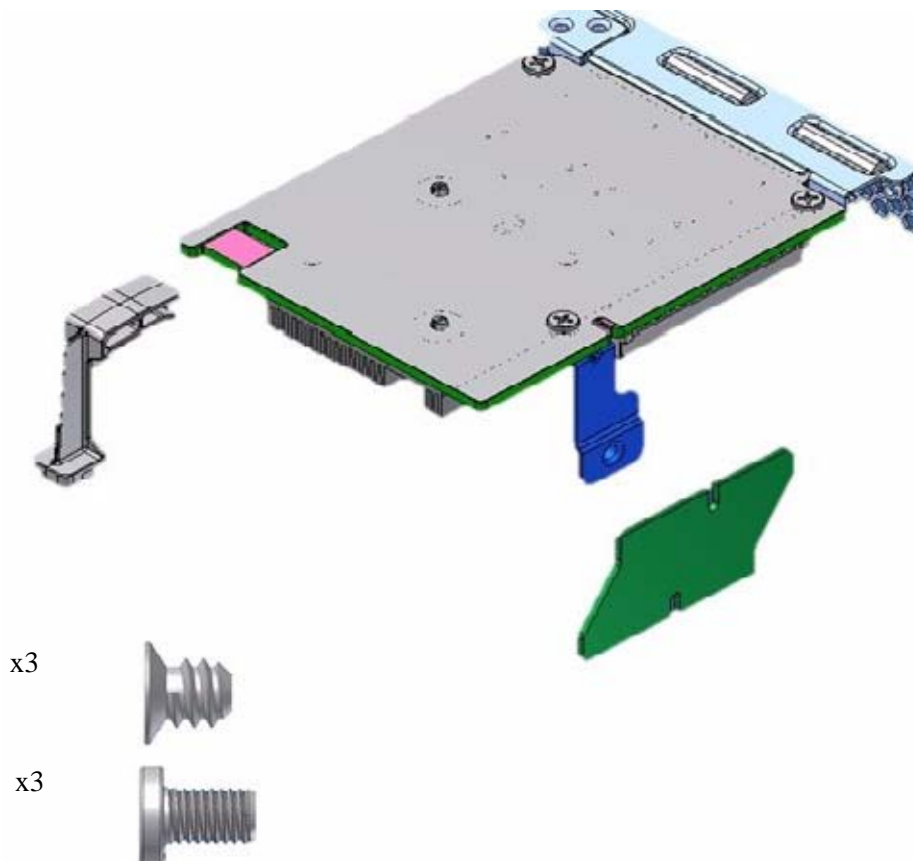


4.3 Installation Instructions

Remove the server from the chassis.

1. Connect an ESD strap to your wrist and to a valid ESD ground.
2. Push the latch and pull on the handle.

Figure 6: Removing From the Server


Screws holding the faceplate

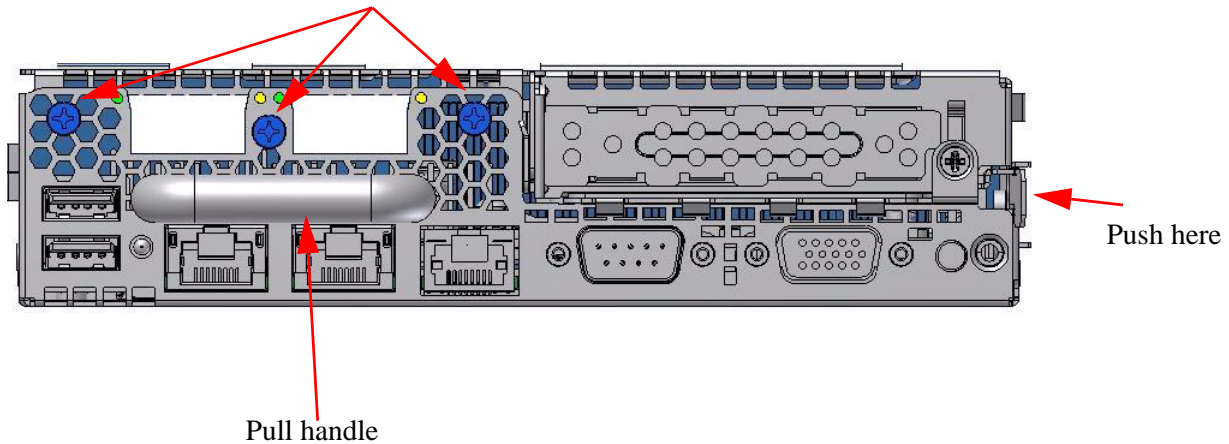

3. Remove the server and place on a work bench.
4. Above the handle are screws holding on the faceplate.
5. Remove these screws and discard.
6. Remove the two screws on the top side of the server and discard.


Figure 7: Top View

Screws in top

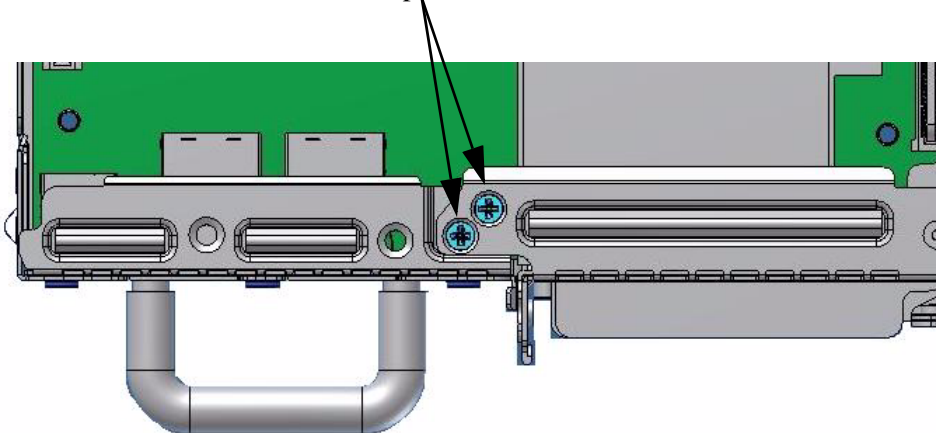


7. Remove the faceplate.
8. Push the plastic leg onto the board.

Figure 8: Install the Plastic Leg onto the Board

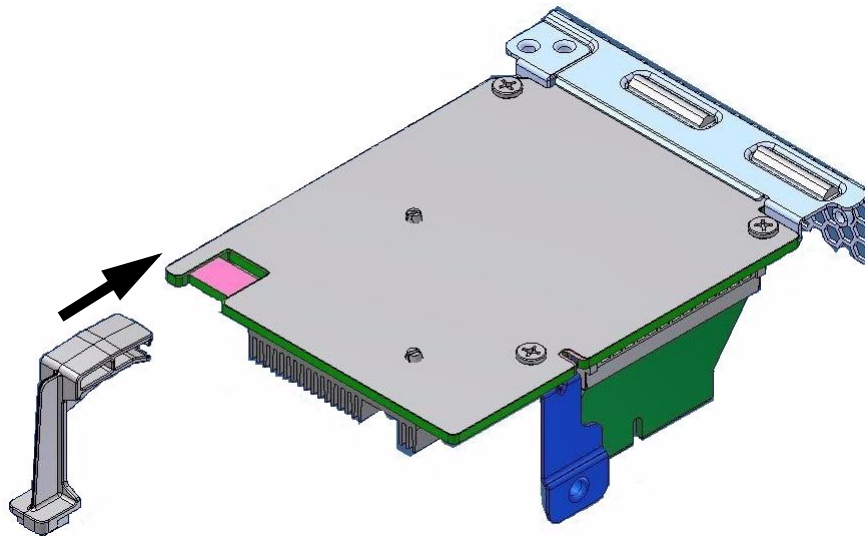


9. Push the Connector board into the card. The connector board must be installed as seen in Figure 9, directed toward the back of the server.

Figure 9: Installing the Connector Board into the HCA Card

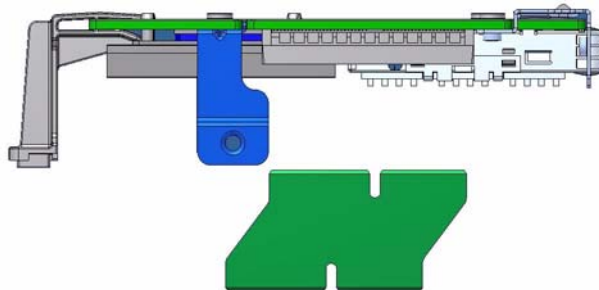

10. Put the card into place in the server, catching the cages into the front panel of the server. The metal leg must go inside of the server and line up with the hole in the side of the server. Also push the connector board into the socket in the server.
11. Screw in a flat head screw for the metal leg.

Figure 10: Dell Card Installed

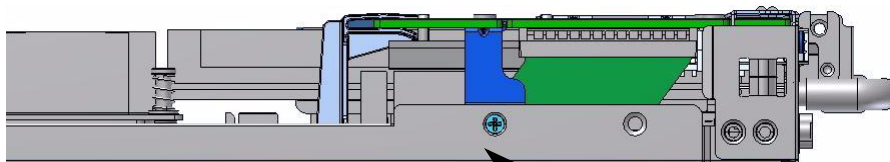


Install a flathead screw through the server into the metal leg.

12. Screw in three panhead screws into the front panel.

Figure 11: Front Panel


Screws holding the faceplate

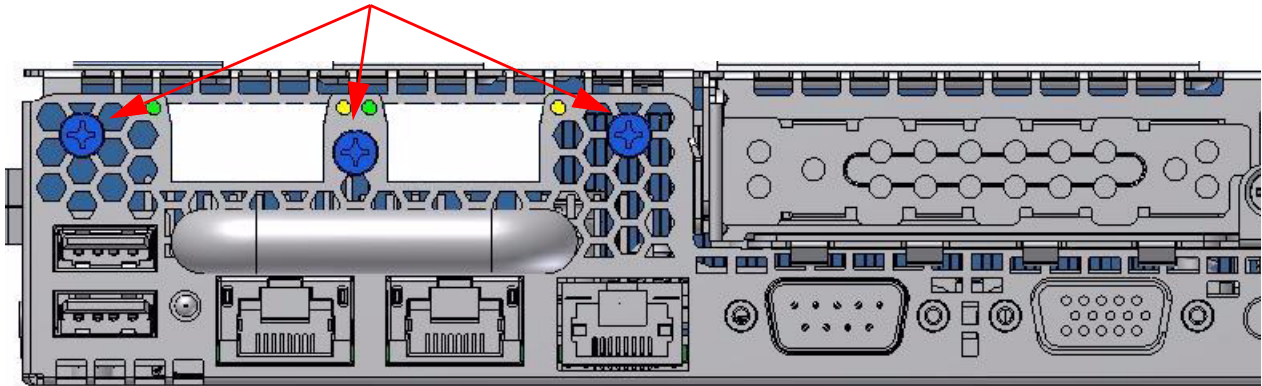

13. Screw in two flathead screws on the top of the server into the HCA card.

Figure 12: Top View

Screws in top

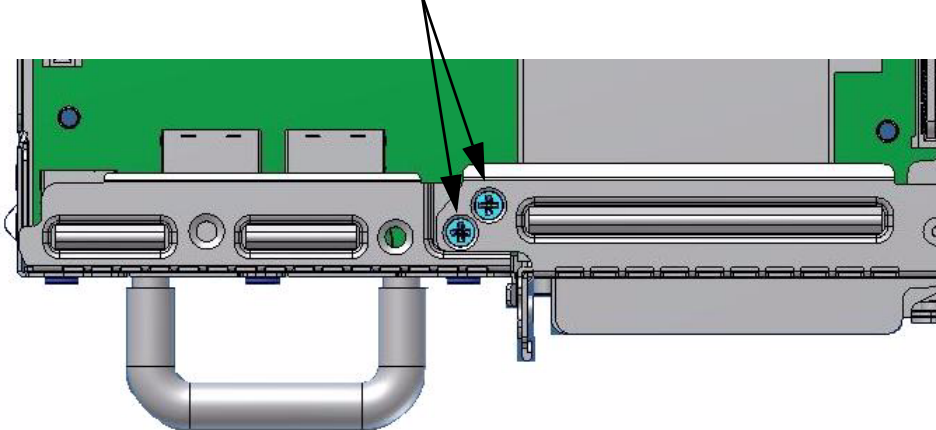

14. Slide the server in the chassis.

4.4 Safety Warnings

1. Installation Instructions



Read all installation instructions before connecting the equipment to the power source.

2. Over Temperature



This equipment should not be operated in an area with an ambient temperature exceeding the maximum recommended: 55°C (131°F).
To guarantee proper air flow, allow at least 8cm (3 inches) of clearance around the ventilation openings.

3. Lightening – Electrical Hazard



During periods of lightning activity, do not work on the equipment.

4. Installation of Equipment



This equipment should be installed, replaced, or serviced only by trained and qualified personnel.

5. Disposal of Equipment



Disposal of this equipment should be in accordance to all national laws and regulations.

6. Compliance with Local and National Codes



This equipment should be installed in compliance with local and national electrical codes.

5 Cables and Modules

These cards support passive copper cables and active optical cables, both direct attach and through a transceiver module, at up to QDR data rates. See www.mellanox.com => Products => Cables for cable type, model, module, and length recommendations.

5.1 Cable Installation

All cables can be inserted or removed with the unit powered on. To insert a cable, press the connector into the port receptacle until the connector is firmly seated. The GREEN LED indicator will light when the physical connection is established (that is, when the unit is powered on and a cable is plugged into the port with the other end of the connector plugged into a functioning port). After plugging in a cable, lock the connector using the latching mechanism particular to the cable vendor. When a logical connection is made the YELLOW LED will come on. When data is being transferred the yellow led will blink.

Note: When installing cables make sure that the latches engage.

Note: Always install and remove cables by pushing or pulling the cable and connector in a straight line with the card.

Care should be taken not to impede the air exhaust flow through the ventilation holes. Cable lengths should be used which allow for routing horizontally around to the side of the chassis before bending upward or downward in the rack.


To remove a cable, disengage the locks and slowly pull the connector away from the port receptacle. Both LED indicators will turn off when the cable is unseated.



Cables, especially long copper cables, can weigh a substantial amount. Make sure that the weight of the cable is supported on its own and is not hanging from the adapter card.

5.1.1 Inserting a Cable into the Card

1. Support the weight of the cable before connecting the cable to the card. Do this by using a cable holder or tying the cable to the rack.
2. Determine the correct orientation of the connector to the card before inserting the connector. Do not try and insert the connector up side down. This may damage the card.
3. Insert the connector into the card. Be careful to insert the connector straight into the cage. Do not apply any torque, up or down, to the connector cage in the card.
4. Make sure that the connector locks in place.

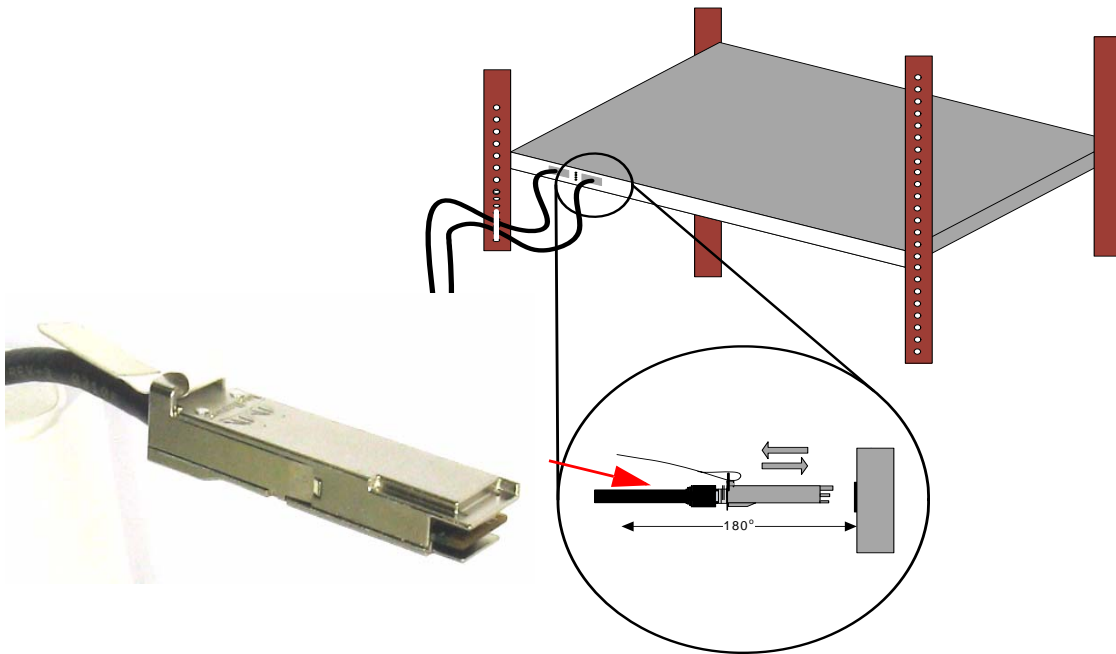Figure 13: Connector Orientation


5.1.2 Removing a Cable from the Card

1. Pull on the latch release mechanism thereby unlatching the connector and pull the connector out of the cage.
2. Do not apply torque to the connector when removing it from the card.
3. Remove any cable supports that were used to support the cable's weight.

Appendix A: Specifications

A.1 Board Mechanical Drawing and Dimensions

The ConnectX-2 I/O card mechanical drawing is depicted in Figure 14.

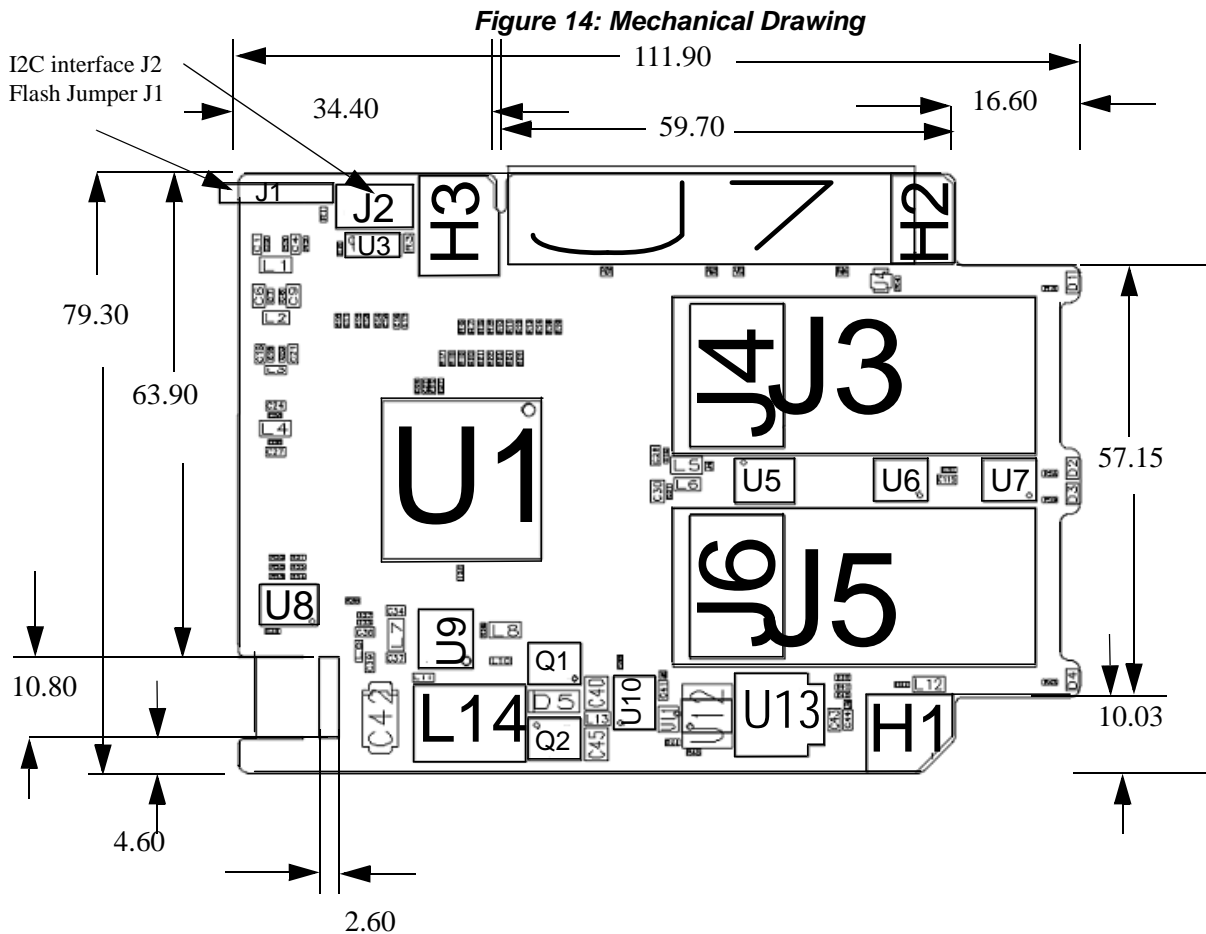

Note: All dimensions are in millimeters.

J1 is the flash jumper.
J2 is the I2C Connector.

A.2 EMC Certification Statements

A.2.1 FCC Statements (USA)

Class A Statements:

§ 15.21

Statement

Warning! Changes or modifications to this equipment not expressly approved by the party responsible for compliance (Mellanox Technologies) could void the user's authority to operate the equipment.

§15.105(a)

Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

A.2.2 EN Statements (Europe)

EN55022 Class A Statement:

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be

A.2.3 ICES Statements (Canada)

Class A Statement:

"This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada."

A.2.4 VCCI Statements (Japan)

Class A Statement:

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

(Translation - "This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio interference may occur, in which case the user may be required to take corrective actions.")

A.2.5 KCC Notice (Republic of Korea Only)

The KCC label may be located separately from the other regulatory markings applied to your product.

Class A devices are for business purposes.

Class A Device

| 기종별 | 사용자안내문 |
|-----------------------|---|
| A급 기기 (업무용 정보통신기기) | 이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며 만약 잘못 판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다. |

KCC Class A Regulatory Label

If the regulatory label includes the following marking, your device is a Class A product:



1. 기기의 명칭(모델명):
2. 인증번호:(A)
3. 인증받은 자의 상호:
4. 제조년월일:
5. 제조자/제조국가:

A.3 Specifications

Table 10 - ConnectX-2 MCQH29-XDR Specifications

| Physical | | Power and Environmental | |
|--------------------------|---|-------------------------|--|
| Size: | 79.30mm X 111.90 mm | Voltage: | 12V, 3.3V |
| Air Flow: | 200LFM @55°C | Typ Power: | 8.74W Passive cables 12.74W Active cables |
| QSFP 40Gb/s Connector: | InfiniBand (Copper and optical) Max power per port 3.5 W. | Maximum Power: | 10.11W Passive cables 14.11 Active cables |
| | | Temperature: | 0°C to 55°C |
| Protocol Support | | Regulatory | |
| InfiniBand: | IBTA v1.2.1, Auto-Negotiation (20Gb/s@5Gt/s) or (10Gb/s@2.5Gt/s) | Safety: | US/Canada: cTUVus EU: IEC60950 International: CB |
| Ethernet: | IEEE Std 802.3ae 10 Gigabit Ethernet IEEE Std 802.3ad Link Aggregation and Failover IEEE Std 802.3x Pause IEEE Std 802.1Q VLAN tags IEEE Std 802.1p Priorities Multicast Jumbo frame support (10KB) 128 MAC/VLAN addresses per port | EMC (Emissions): | USA: FCC, Class A Canada: ICES, Class A EU: CE Mark (EN55022 Class A, EN50024, EN61000-3-2, EN61000-3-3) Japan: VCCI, Class A Korea: KCC Class A Australia/ New Zealand: C-Tick Class A |
| QoS: | 8 Virtual Lanes for InfiniBand 8 Priority Queues for Ethernet | RoHS: | R-6 |
| RDMA Support: | Yes, All Ports | | |
| Data Rate SFP+ Ethernet: | 10 Gb/s | | |
| QSFP InfiniBand: | 40 Gb/s | | |
| PCI Express: | 2.0 SERDES @ 5.0 GT/s | | |


Appendix B: QSFP Interface

| | | | |
|----|---------|---------|----|
| 20 | GND | GND | 19 |
| 21 | Rx2n | Rx1n | 18 |
| 22 | Rx2p | Rx1p | 17 |
| 23 | GND | GND | 16 |
| 24 | Rx4n | Rx3n | 15 |
| 25 | Rx4p | Rx3p | 14 |
| 26 | GND | GND | 13 |
| 27 | ModPrsL | SDA | 12 |
| 28 | IntL | SCL | 11 |
| 29 | VccTx | Vcc Rx | 10 |
| 30 | Vcc1 | ResetL | 9 |
| 31 | LPMODE | ModSelL | 8 |
| 32 | GND | GND | 7 |
| 33 | Tx3p | Tx4p | 6 |
| 34 | Tx3n | Tx4n | 5 |
| 35 | GND | GND | 4 |
| 36 | Tx1p | Tx2p | 3 |
| 37 | Tx1n | Tx2n | 2 |
| 38 | GND | GND | 1 |

Table 3- InfiniBand QSFP Connector Pinout

| Connector Pin Number | Connector Pin Name | Signal Description |
|----------------------|--------------------|-------------------------------------|
| 1 | GND | Ground |
| 2 | Tx2n | Transmitter Inverted Data Input |
| 3 | Tx2p | Transmitter Non-Inverted Data Input |
| 4 | GND | Ground |
| 5 | Tx4n | Transmitter Inverted Data Input |
| 6 | Tx4p | Transmitter Non-Inverted Data Input |
| 7 | GND | Ground |
| 8 | ModSelL | Module Select |
| 9 | ResetL | Module Reset |
| 10 | Vcc Rx | +3.3 V Power supply receiver |
| 11 | SCL | 2-wire serial interface clock |
| 12 | SDA | 2-wire serial interface data |
| 13 | GND | Ground |
| 14 | Rx3p | Receiver Non-Inverted Data Output |
| 15 | Rx3n | Receiver Inverted Data Output |
| 16 | GND | Ground |
| 17 | Rx1p | Receiver Non-Inverted Data Output |
| 18 | Rx1n | Receiver Inverted Data Output |
| 19 | GND | Ground |
| 20 | GND | Ground |
| 21 | Rx2n | Receiver Inverted Data Output 3 |
| 22 | Rx2p | Receiver Non-Inverted Data Output 3 |
| 23 | GND | Ground |
| 24 | Rx4n | Receiver Inverted Data Output 3 |
| 25 | Rx4p | Receiver Non-Inverted Data Output 3 |
| 26 | GND | Ground |
| 27 | ModPrsL | Module Present |
| 28 | IntL | Interrupt |
| 29 | Vcc Tx | +3.3 V Power supply transmitter |
| 30 | Vcc 1 | +3.3 V Power Supply |
| 31 | LPMODE | Low Power Mode |
| 32 | GND | Ground |
| 33 | Tx3p | Transmitter Non-Inverted Data Input |
| 34 | Tx3n | Transmitter Inverted Data Input |
| 35 | GND | Ground |
| 36 | Tx1p | Transmitter Non-Inverted Data Input |
| 37 | Tx1n | Transmitter Inverted Data Input |
| 38 | GND | Ground |

Figure 15: QSFP Connector Male and Female Views

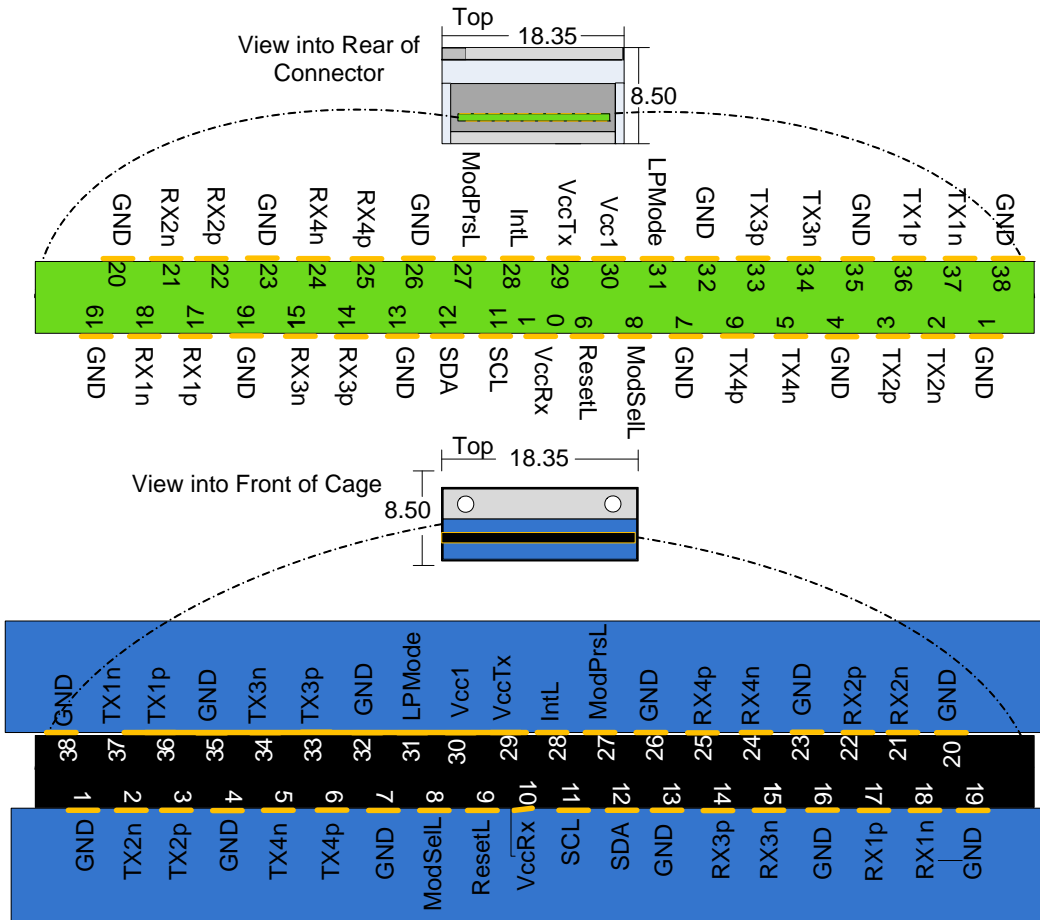

Appendix C: Avertissements de sécurité d'installation (French)

1. Instructions d'installation



Lisez toutes les instructions d'installation avant de brancher le matériel à la source d'alimentation électrique.

2. Température excessive



Ce matériel ne doit pas fonctionner dans une zone avec une température ambiante dépassant le maximum recommandé de 55°C (131°F). Un flux d'air de 200LFM à cette température ambiante maximale est nécessaire. En outre, pour garantir un bon écoulement de l'air, laissez au moins 8 cm (3 pouces) d'espace libre autour des ouvertures de ventilation.

3. Orages – dangers électriques



Pendant un orage, il ne faut pas utiliser le matériel.

4. Installation du matériel



Ce matériel ne doit être installé, remplacé ou entretenu que par du personnel formé et qualifié.

5. Elimination du matériel



L'élimination de ce matériel doit s'effectuer dans le respect de toutes les législations et réglementations nationales en vigueur.

6. Codes électriques locaux et nationaux



Ce matériel doit être installé dans le respect des codes électriques locaux et nationaux.

Appendix D: Installation - Sicherheitshinweise (German)

1. Installationsanleitungen



Lesen Sie alle Installationsanleitungen, bevor Sie das Gerät an die Stromversorgung anschließen.

2. Übertemperatur



Dieses Gerät sollte nicht in einem Bereich mit einer Umgebungstemperatur über der maximal empfohlenen Temperatur von 55°C (131°F) betrieben werden. Außerdem sollten mindestens 8 cm (3 in.) Freiraum um die Belüftungsöffnungen sein, um einen einwandfreien Luftstrom zu gewährleisten.

3. Bei Gewitter - Elektrische Gefahr



Arbeiten Sie während eines Gewitters und Blitzschlag nicht am Gerät.

4. Geräteinstallation



Diese Gerät sollte nur von geschultem und qualifiziertem Personal installiert, ausgetauscht oder gewartet werden.

5. Geräteentsorgung



Die Entsorgung dieses Geräts sollte unter Beachtung aller nationalen Gesetze Bestimmungen erfolgen.

6. Regionale und nationale elektrische Bestimmungen



Dieses Gerät sollte unter Beachtung der regionalen und nationalen elektrischen Bestimmungen installiert werden.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>